NESPRESSO COFFEE MACHINE Instructions for use

Insert plug into electric socket
Fill container at back of machine with water
Lift up handle and insert choice of capsule

 Pull down handle all the way
 Lift plastic tray and place cup

Press the two buttons on the top of machine simultaneously until both start flashing
When buttons stop flashing, press either the *Expresso* or *Lungo* button for a delicious cup of *coffee...*

Machine holds approximately eight empty capsules. Pull out tray to dispose of used capsules......

Nespresso compatible capsules ONLY

